

Change battery LED tube ID

1. Press ENTER button to the following picture:




2. Press UP -UP -DOWN -DOWN-ENTER button to enter following image:

(Pls ensure to follow the order UP- UP -DOWN- DOWN-ENTER)




3. Press ENTER to enter Graph1 and then press UP or DOWN to Set the ID number, After that press ENTER to confirm

(DEV number must be same with controller ID)

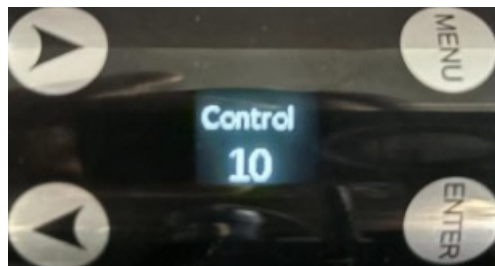


Graph1

4. Press MENU to back ID interface.

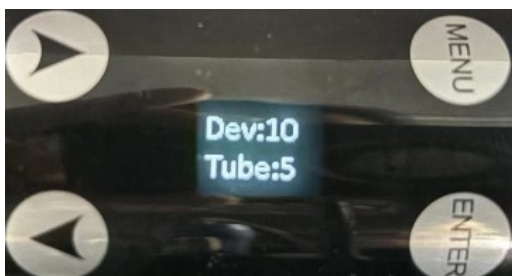


Change the Controller ID

1. Press MENU and DOWN button to enter “Advance”

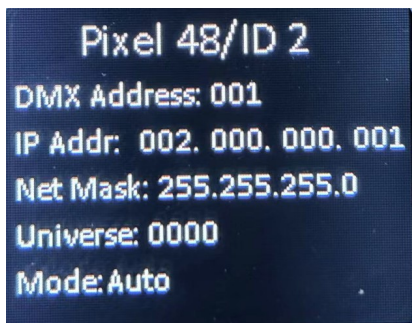


Graph 1

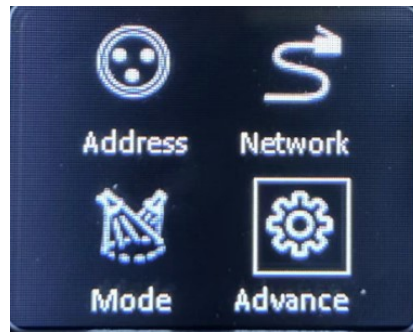


Graph 2

2. Press ENTER to Graph3 , then press DOWN and ENTER to Graph4

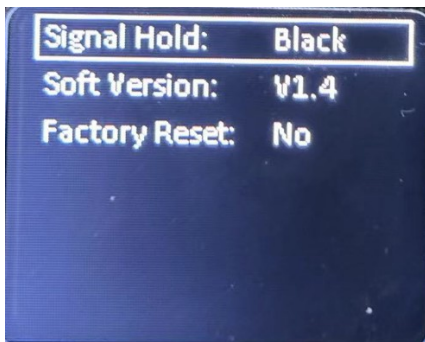

Graph 3

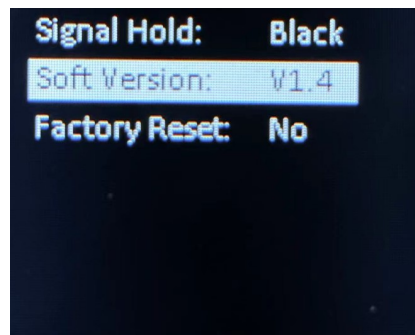


Graph 4


3. Press UP-UP-DOWN-DOWN-ENTER to Graph5, then press Enter and UP or DOWN to set the ID number.

(Pls ensure to follow the order UP- UP -DOWN- DOWN-ENTER)

4. Press ENTER to confirm after setting the ID

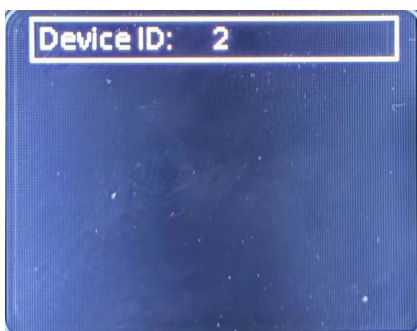

Graph 6

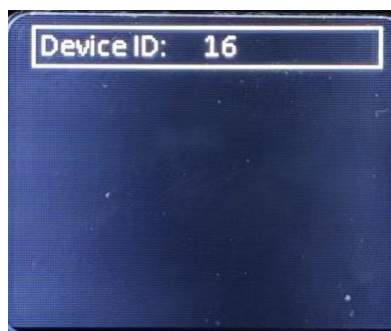

Graph 7

Note: The DEV NO.of LED tube and the ID of controller must be the same