

一、Download LED LAMP software

Download the LED LAMP software on Apple Store, as shown below:



二、Battery tube setting

1. Set the battery tubes to the same Dev, such as Dev: (3), ID: (0-7), as shown in the figure below



(Battery tube Dev and Tube setting steps are as follows:


Press ENTER → UP UP DOWN DOWN → ENTER under the Dev / Tube interface, enter to set the Control value




2. Set only one Tube in WIFI mode (Mode-> WIFI) and the other tubes in Slave mode (Mode-> Wave).

* the controller should be charge mode or turn off when tubes are on Wifi mode

Open WLAN and connect WIFI (LED-00-XXXX) below:

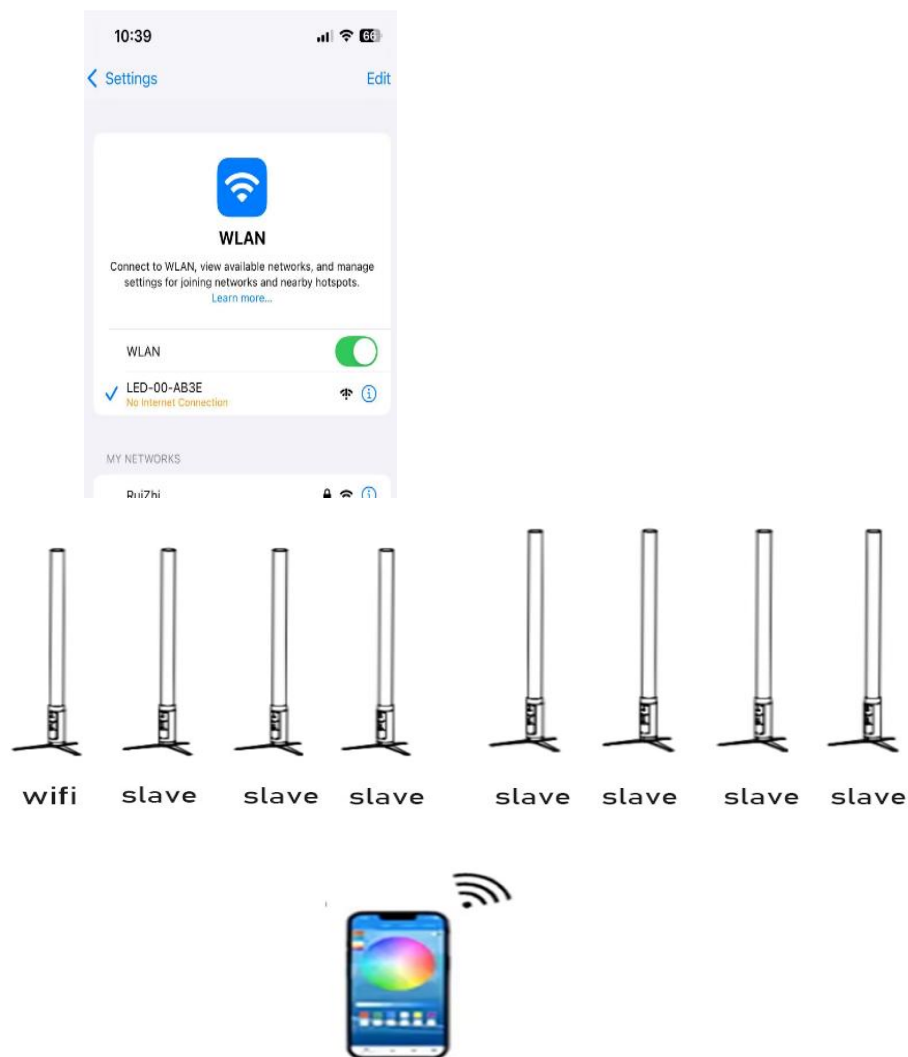

3. Open the LED LAMP software and open the permission

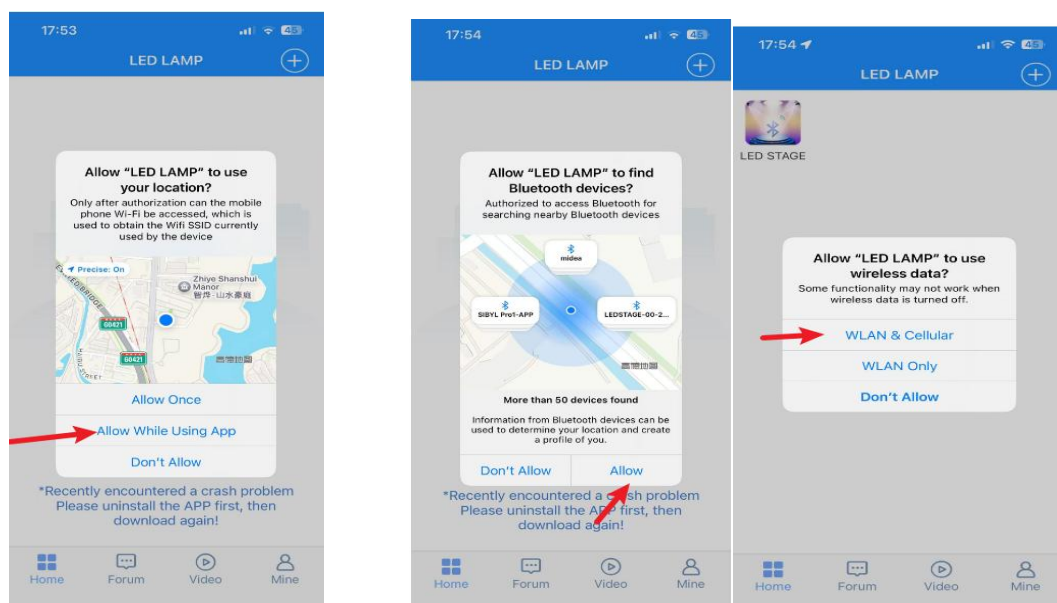

4. Select LED STAGE to start using the software to control the tube.

